
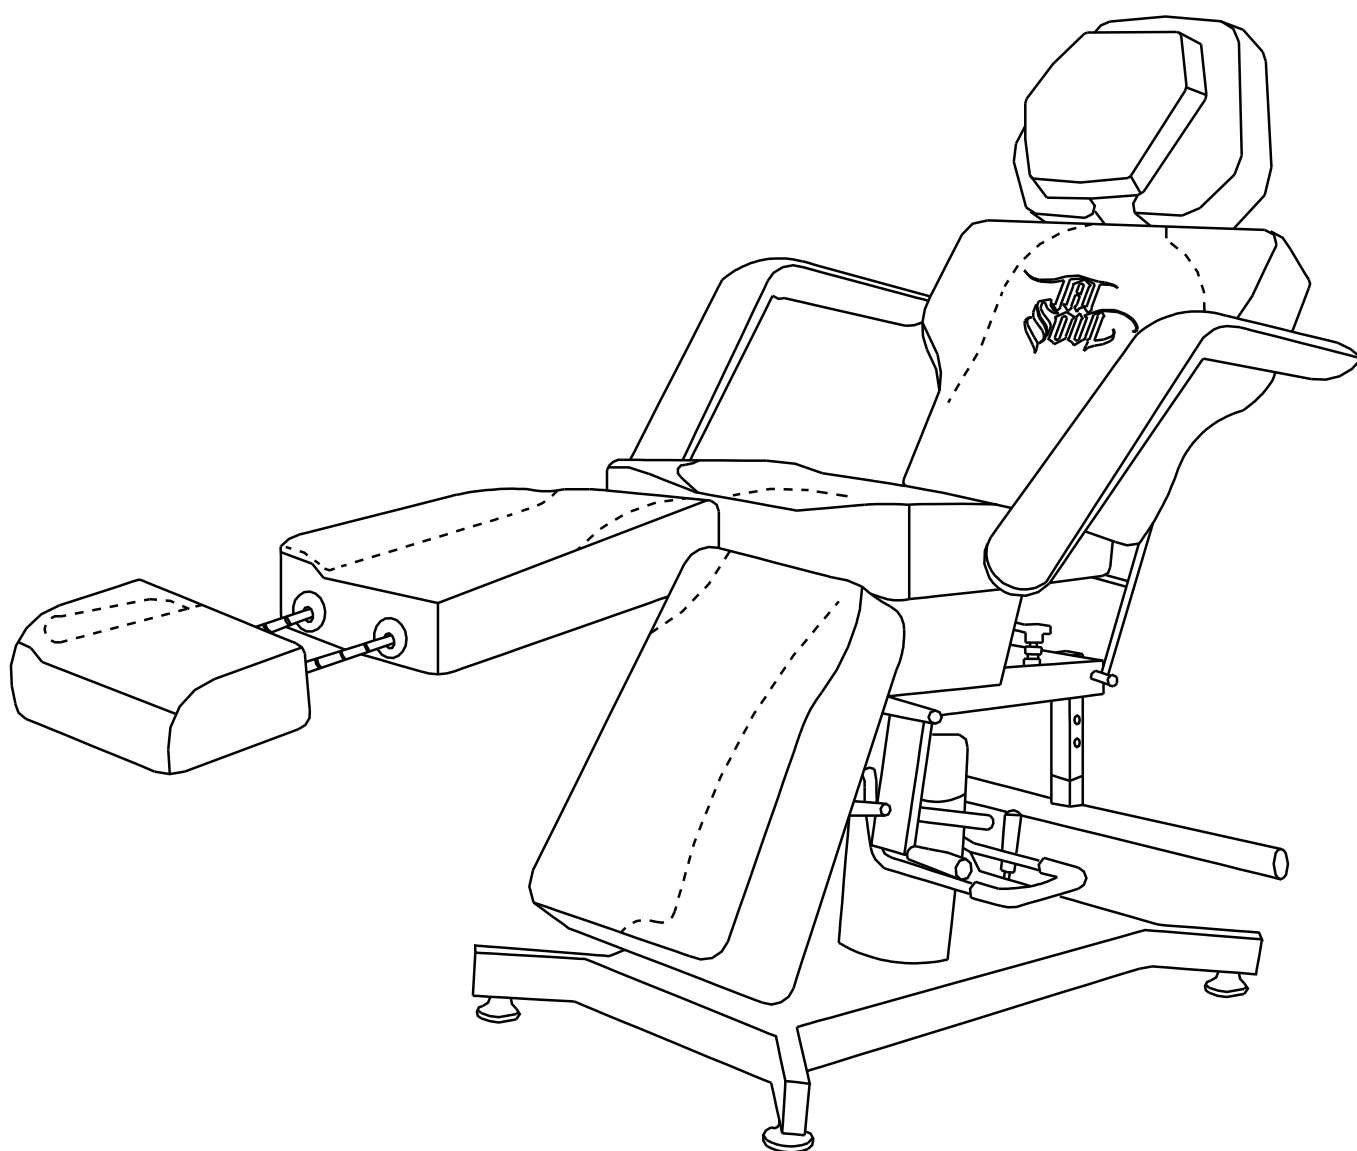
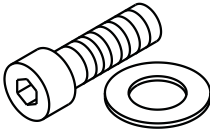
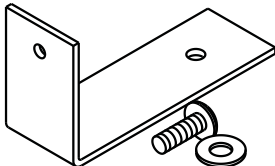
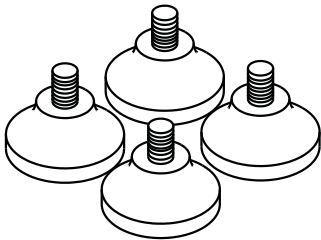
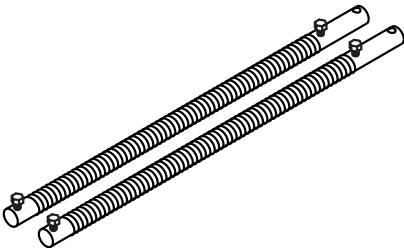
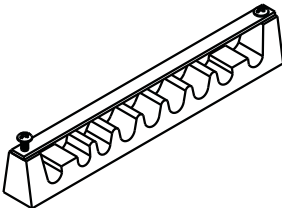
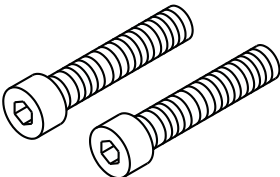
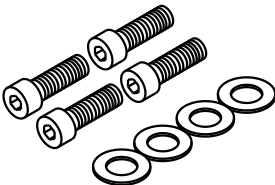
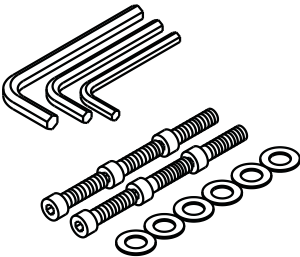
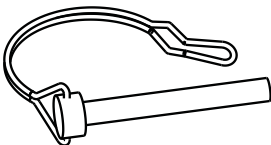


# INSTRUCTION MANUAL

TATSOUL CC-570

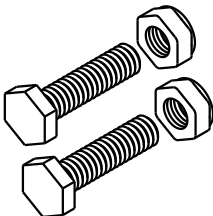

CONTENTS

 <p>P1 (60027) Connector Bolt P2 (60045) Connector Washer</p>	 <p>S1 (60030) Spring Hook S2 (60032) Hook Screw</p>	 <p>W (60040) Adjustable Foot Pegs</p>
 <p>Y (60042) Leg Bars</p>	 <p>X (60037) Back Teeth</p>	 <p>X (60041) Back Teeth Bolts</p>
 <p>T1 (60033) Base Bolt T2 (60034) Base Washer</p>	 <p>U1 (60035) Top Frame Bolt U2 (60036) Top Frame Washer Z1 (60043) Large Allen Wrench Z2 (60044) Medium Allen Z3 (60045) Small Allen</p>	 <p>Z4 (60046) Lock Pin</p>
		 <p>O1 (60047) Connector Bolts O2 (60048) Since The Lock Nuts</p>

# ASSEMBLY INSTRUCTIONS






1. INSERT FOUR PEGS ONTO BASE AS SHOWN IN PICTURE.

2. INSTALL THE HYDRAULIC UNIT TO THE BASE OF THE CHAIR USING THE 4 X BASE BOLTS (60033) AND 4 X BASE WASHERS (60034).

3. SCREW ON SPRING HOOK (60030) TO THE BACK OF THE CHAIR TO TOP WITH HOOK SCREW (60032)





4. ALIGN BODY FRAME HOLES TO PRECUT HOLES ON CHAIR: INSERT 6 X BOLTS (60035) WITH 6 X WASHERS (60036) WITH ALLEN WRENCH.

5. REMOVE BACK TEETH COVER BEFORE INSTALLING IT TO THE BACK OF THE CHAIR: ALIGN HOLES IN ORDER TO INSTALL THE BACK TEETH IN CORRECT ORIENTATION - SECURE BACK TEETH TO CHAIR USING 2 X BACK TEETH BOLTS (60041).

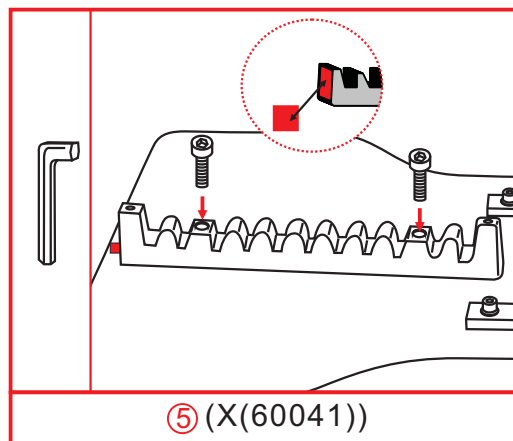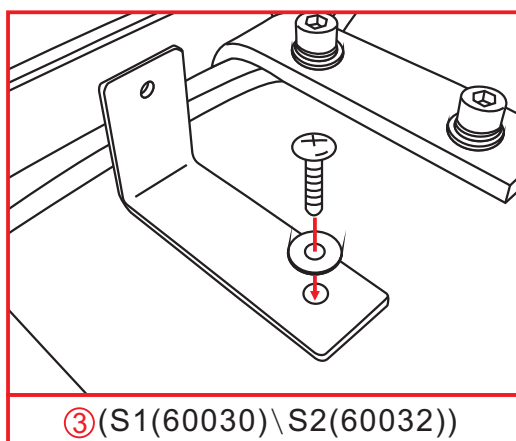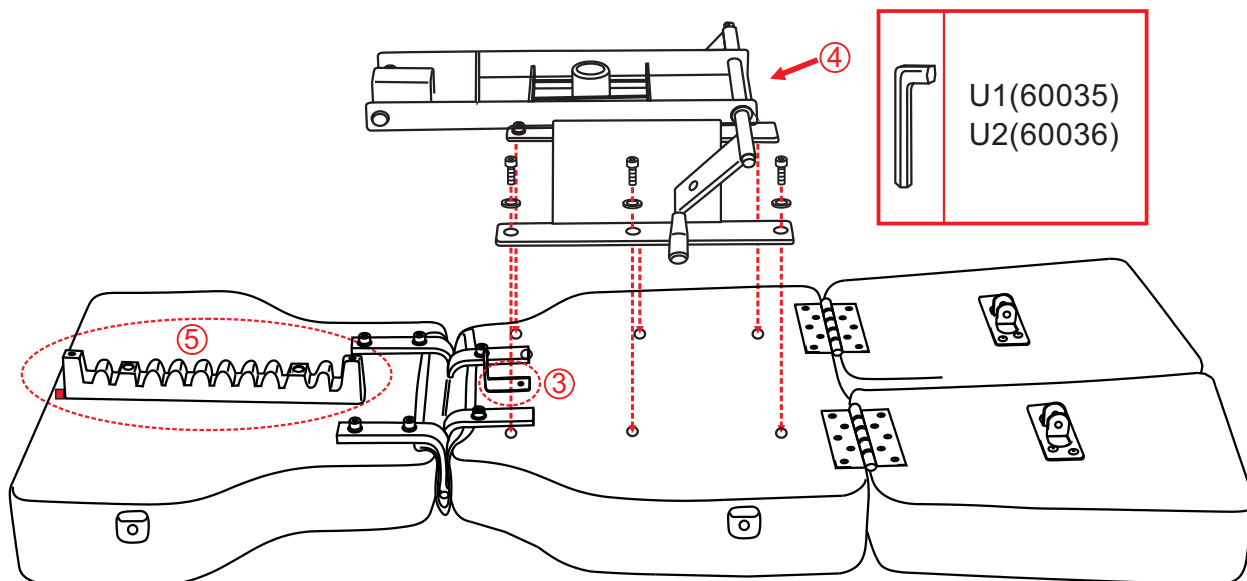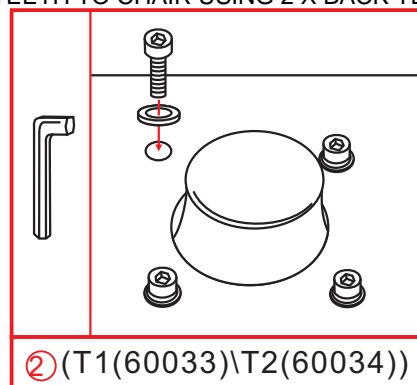
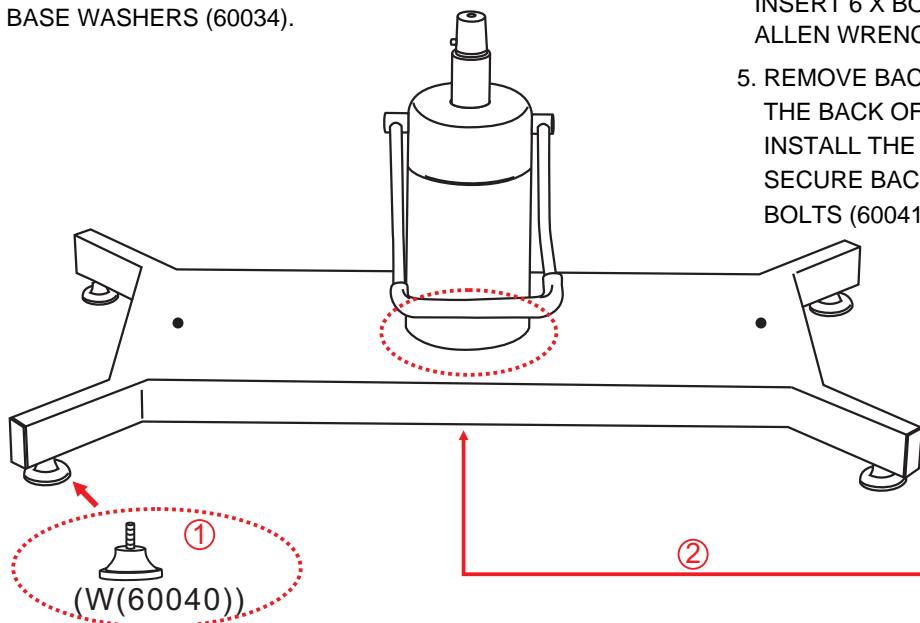


# ASSEMBLY INSTRUCTIONS

6. [2X] INSERT LEG BARS INTO POSITION WITH CONVENTIONAL SCREWDRIVER AS SEEN IN PICTURE.
7. [2X] USE ALLEN WRENCH TO SECURE LEG BARS (60042).
8. CONNECT H-BAR TO BACK GROOVES: SCREW IN TEETH WITH CONVENTIONAL SCREWDRIVER ONCE H-BAR IS SET ON GROOVES.

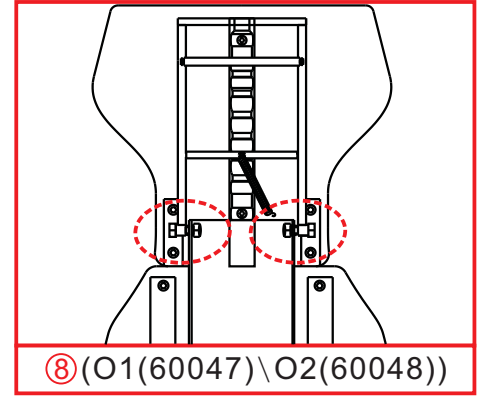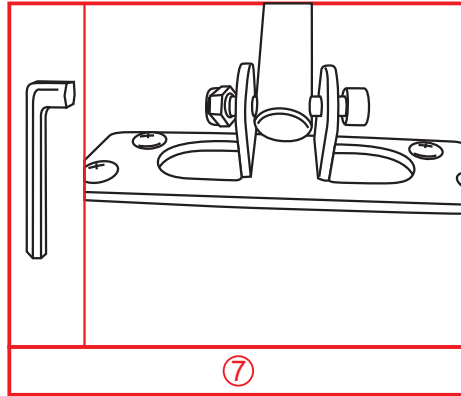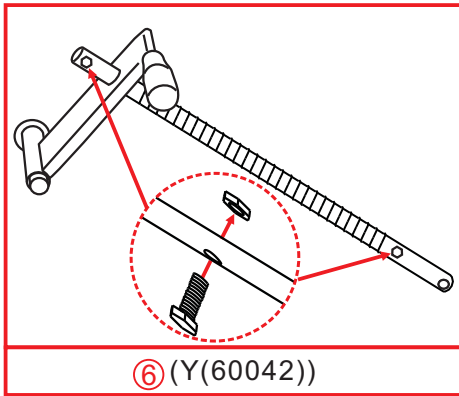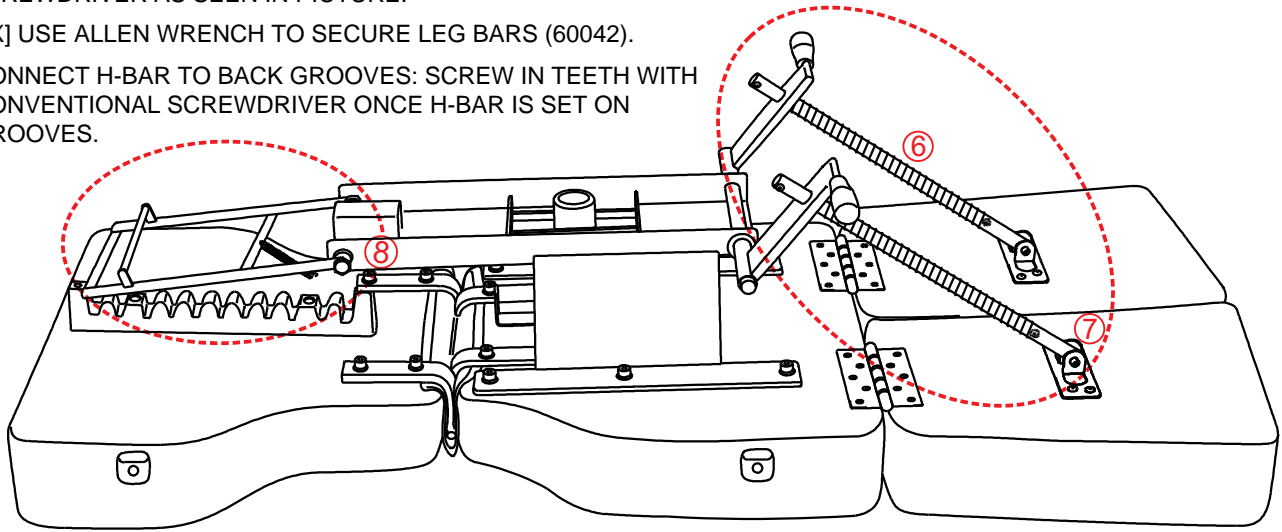

9. IMPORTANT: PLEASE GIVE THE HYDRAULIC POLE A FEW PUMPS UP BEFORE PUTTING THE BED ON TOP OF THE HYDRAULIC.

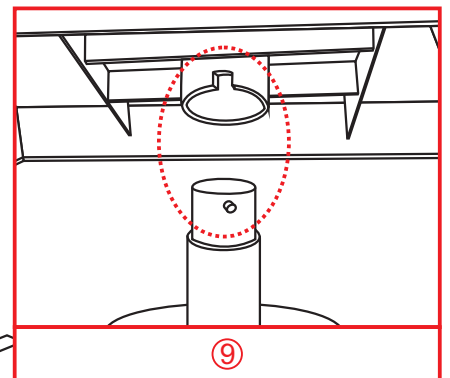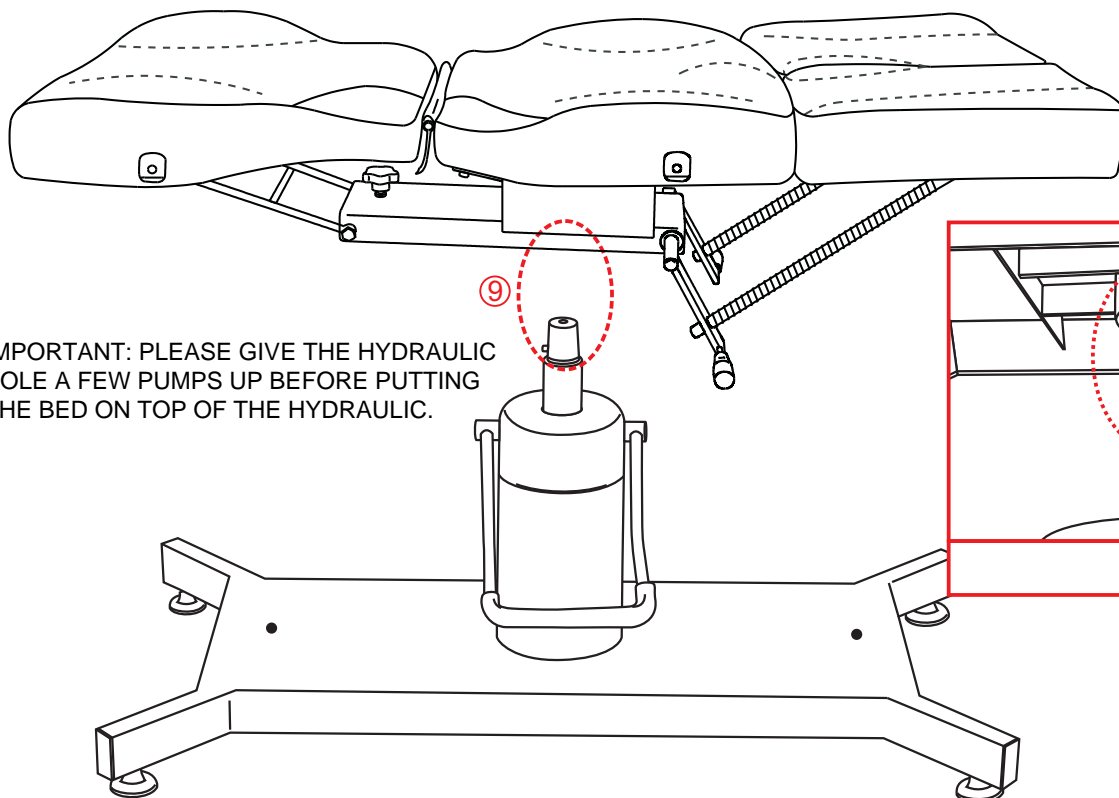






# ASSEMBLY INSTRUCTIONS

10. SCREW BACK TEETH COVER (60037) TO SECURE H-BAR ADJUSTMENTS.



11. ATTACH SPRING FROM BACK H-BAR ONTO HOOK UNDER BODY FRAME.

12. INSERT LOCK PINS z4(60046) AS SHOWN IN PICTURE TO SECURE FOOT REST POSITION.


13. SECURE BED THE CONNECTOR BOLT (60027) AND WASHER (60045) WITH ALLEN WRENCH WHERE FRAME AND HYDRAULIC PEG ALIGN.

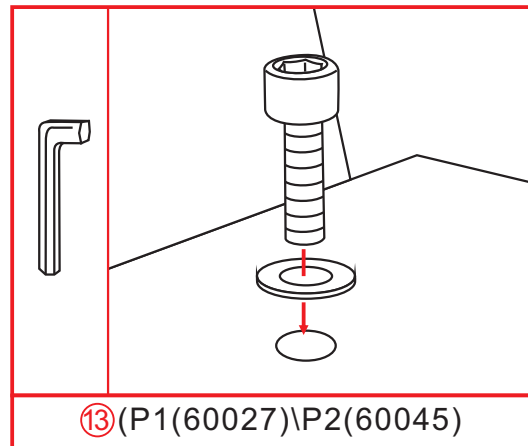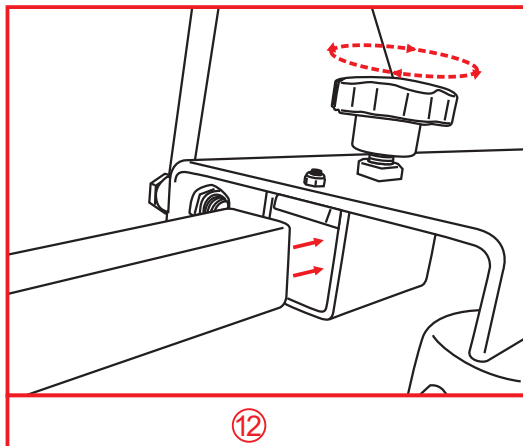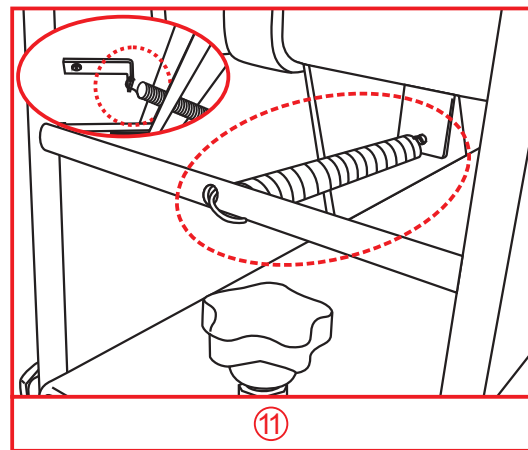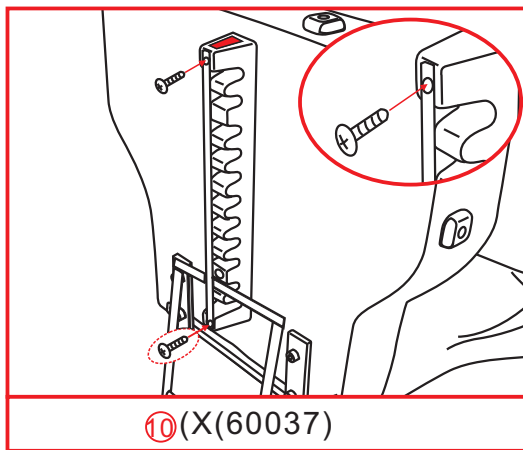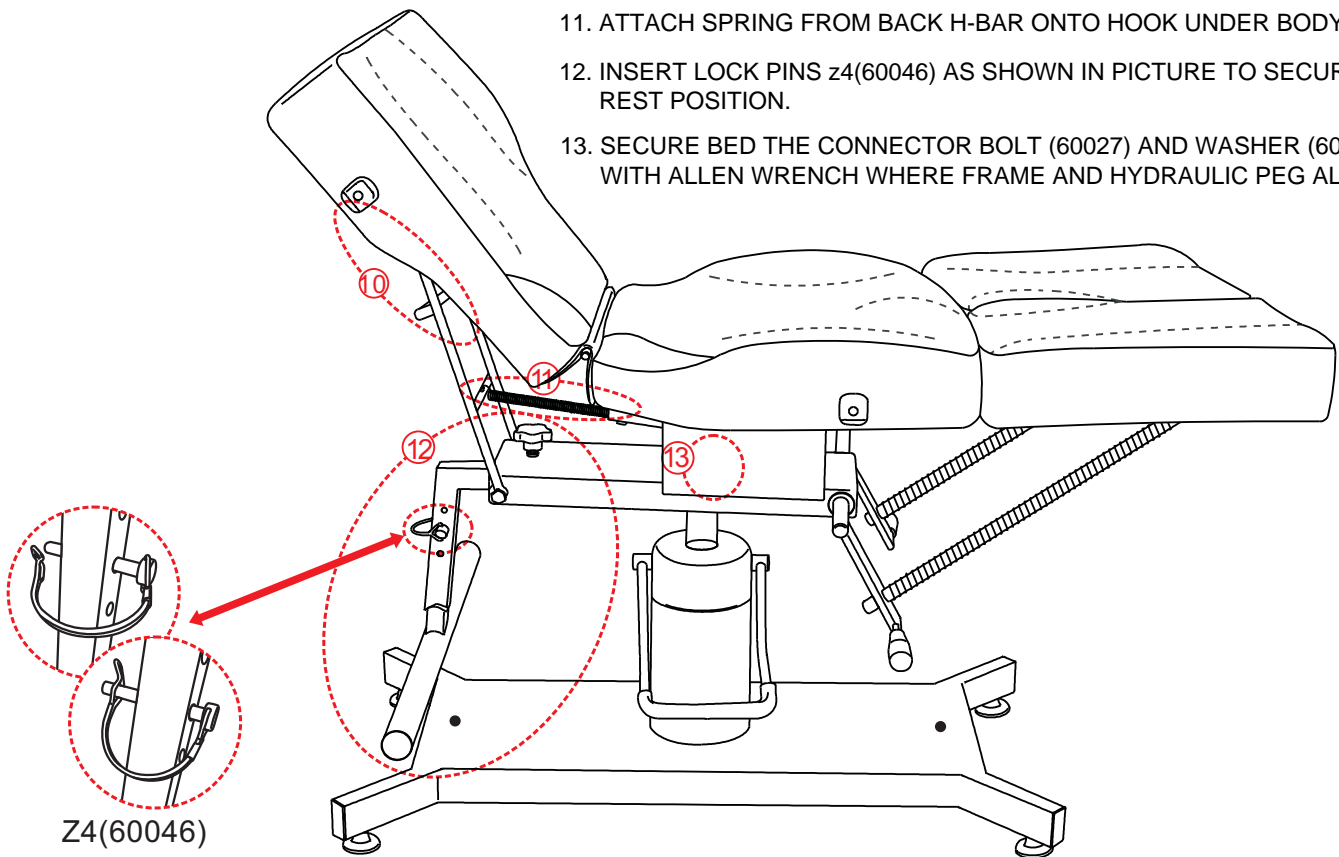


# OPERATING INSTRUCTIONS

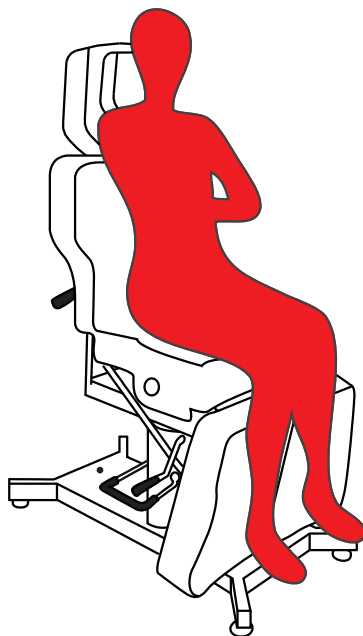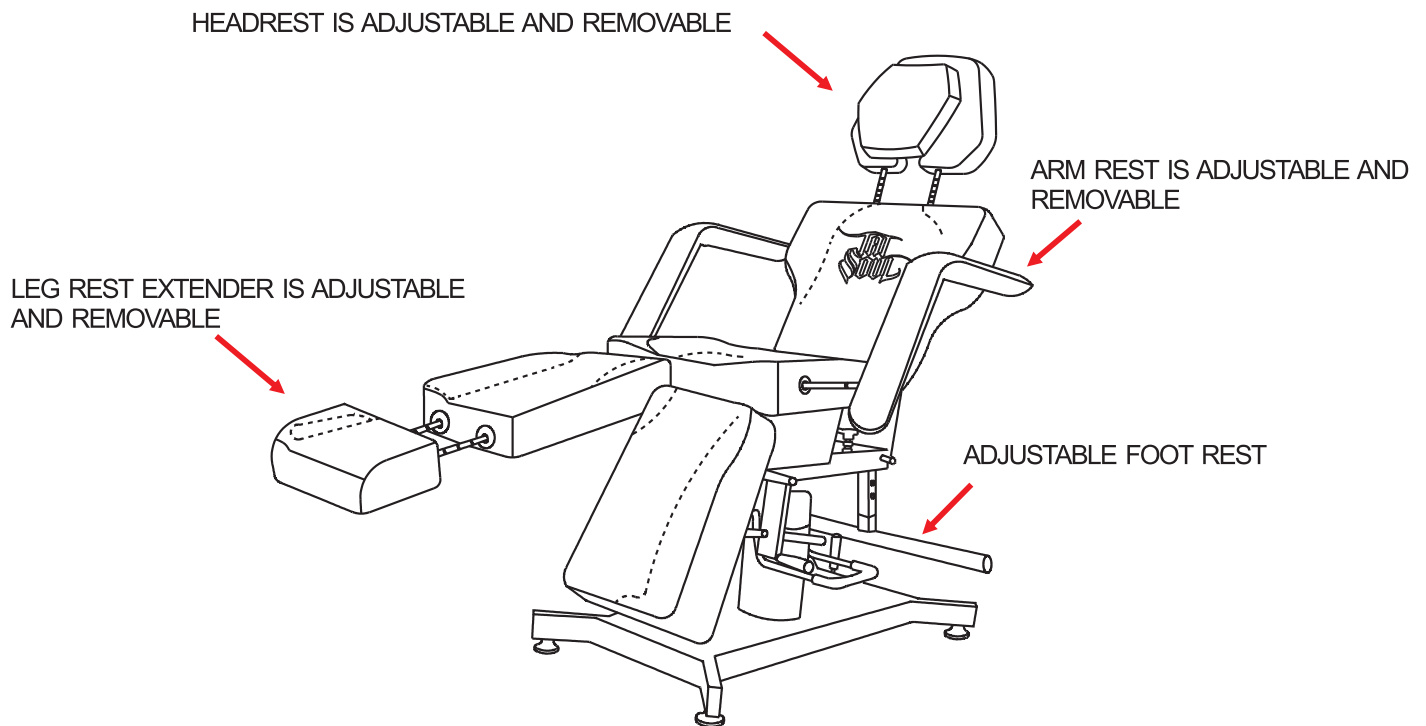

CHAIR  
POSITION

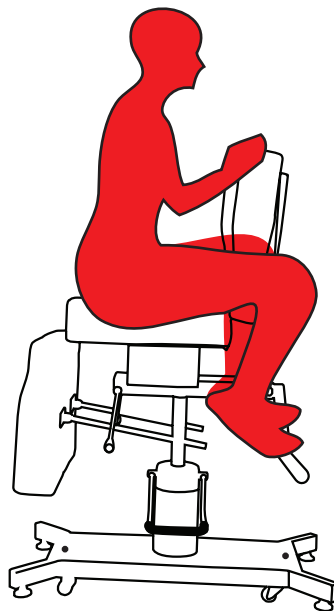

STRADDLE  
POSITION

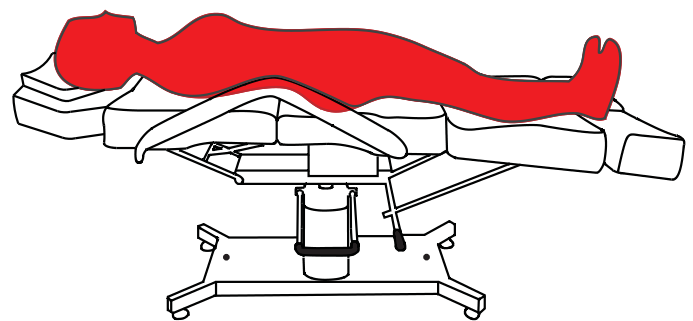


BED POSITION


**WARNING:**  
**DO NOT POSITION CHAIR IN BED FORMAT PERPENDICULAR TO LONG PORTION OF BASE!**

OPTIONAL ACCESSORIES


Face Cradle

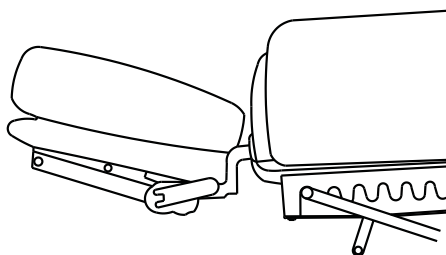

TAT Soul Landing Gear Retractable Wheels

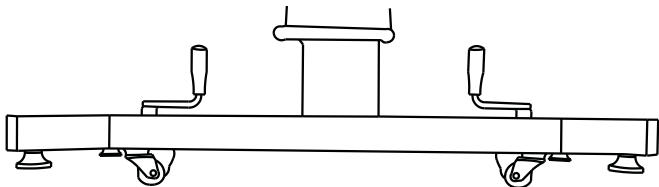

570 Wing Extensions

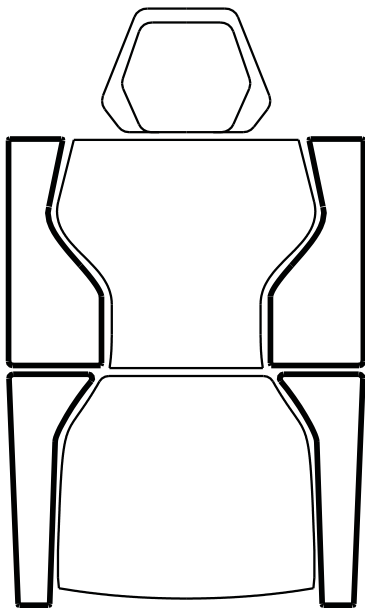

570 Protective Covers



## CONTACT INFORMATION:

.....

If you have any questions about our products, feel free to contact us via email or by phone. We are available via telephone during PST business hours. We try to respond to emails within a few hours of their receipt, even during evenings and weekends.

.....

### General Information:

Email: [sales@tatsoul.com](mailto:sales@tatsoul.com)  
Fax: [1-800-768-5643](tel:1-800-768-5643)

### Sales:

Email: [sales@tatsoul.com](mailto:sales@tatsoul.com)  
Telephone: [1-888-TAT-SOUL](tel:1-888-TAT-SOUL)  
[\(1-888-828-7685\) Option 1](tel:1-888-828-7685)

### Technical Support:

Email: [support@tatsoul.com](mailto:support@tatsoul.com)  
Telephone: [1-888-TAT-SOUL](tel:1-888-TAT-SOUL)  
[\(1-888-828-7685\) Option 2](tel:1-888-828-7685)